


TITLE			
4' x 4' INSULATION ADHESIVE FIELD PATTERN			
SCALE	DWN	CHK	APPROVAL DATE
NONE	DMT	NL	12/14/07
DRAWING NUMBER			REV
ADCO - 001			B

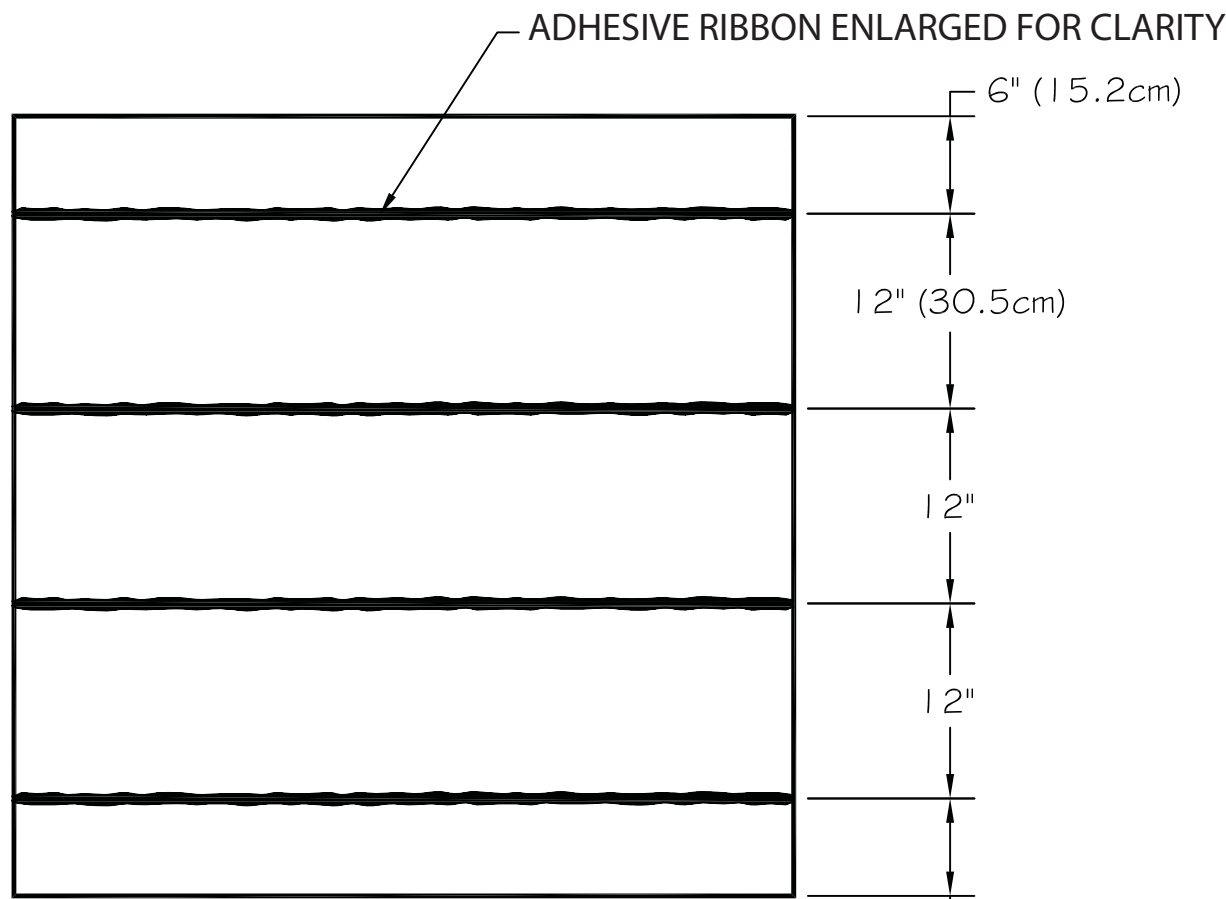

NOTES:

1. 4' x 4' INSULATION BOARDS
2. APPLY MILLENNIUM ONE STEP™/ ONE STEP GREEN® FOAMABLE ADHESIVE DIRECTLY TO THE SUBSTRATE, USING A RIBBON PATTERN. EQUALLY SPACE THE 1/4" - 1/2" (0.625cm - 1.25cm) WIDE BEADS, TO ACHIEVE PROPER COVERAGE RATES FOR INSULATION
3. ATTACHMENT. AFTER FOAMING EACH BEAD WILL EXPAND TO APPROXIMATELY 3/4" - 1 1/2" (1.875cm - 3.75cm).
4. AS ADHESIVE IS APPLIED, IMMEDIATELY PLACE INSULATION BOARD INTO WET ADHESIVE. DO NOT ALLOW THE ADHESIVE TO SKIN OVER. ELIMINATE UN-EVEN SURFACES TO ENSURE POSITIVE CONTACT BETWEEN THE INSULATION BOARD AND SUBSTRATE.
5. KEEP TEMPERATURE OF CONTENTS BETWEEN 65°F - 85°F (18°C - 29°C) 24 HOURS PRIOR TO USE. DO NOT STORE IN DIRECT SUNLIGHT OR HIGH TEMPERATURES 90°F (32°) AND HIGHER.